

# Prox.Pad™ Proximity Reader/Keypad Access Control End User Guide

**NOTE:** This *End User Guide* is designed as a “quick reference” document for Prox.Pad end users, especially for initial installations or new users. It is **not** intended for routine use, and **does not replace** the more comprehensive information supplied in the separate *Prox.Pad Installation/Programming Manual*.

Only the most basic information about monitoring or diagnosing the unit's operating state is included. Also included is information on how to contact your unit's installer for assistance.

## CONTACTING YOUR INSTALLER

If service is ever required for your Prox.Pad unit or you require operational assistance of any kind, this chart is provided. It is highly recommended that you fill in the right-hand columns before the installer leaves your facility following an initial installation.

Contact Information	Details
Installation Company:	
Address 1:	
Address 2 (optional):	
City, State, Zip Code:	
Telephone Number:	
Fax Number:	
E-Mail Address/Web Site:	
Installer's Name:	
Initial Installation Date:	
<b>Your Master Code</b> (after default below is changed):	

## PROX.PAD DEFAULT SETTINGS

Parameter	Default Setting
Master Code (user one)	1234*
Main Relay energizes for	Five (5) seconds
Audible Keypress Feedback	ON
Local Propped Door Sounder activates after	Thirty (30) seconds
Local Forced Door Sounder activates for	Ten (10) seconds
Printer Output Port	IR (infrared) port

## LED INDICATORS/SOUNDER OPERATIONS

LED or Sounder	Visual/Audible Condition	Description	
<b>Yellow LED</b>	Slow blink	Unit is in Program mode	
	Rapid blink	Verify mode is active (checking that the last two values in sequence match)	
	Steady	Program error; to clear, press *	
	Very rapid blink	Memory (eeprom) erase is in progress (commands 40/46, loop-back)	
<b>Bi-color LED</b>	Steady red	Strike is locked	
	Steady green	Strike is energized (timed or latched)	
	Solid green with red flicker	Strike toggle is unlocked and user lockout active	
	Red/green alternating	Awaiting second PIN during "Card AND Code" access attempt	
	Red blink	User lockout is active and strike locked; red LED drops out for 100 ms every second; normal users cannot change the state of the relay	
	<b>Sounder</b>	Short beep (100 ms) every 2 seconds	Propped door is active
		Sounder 1/2 sec on, 1/2 sec off	Forced door is active
3 rapid beeps after code entered or card presented		Code or Card is not found	
3 slow beeps (250 ms), then single beep		Self-test is complete	
1 single beep		Valid card access	

## QUESTIONS OR PROBLEMS

If you have any questions about Prox.Pad operation, or encounter any installation problems, contact your Prox.Pad installer as noted on page 1.